


PARTS LIST

MODEL TB3516/TB4516CC

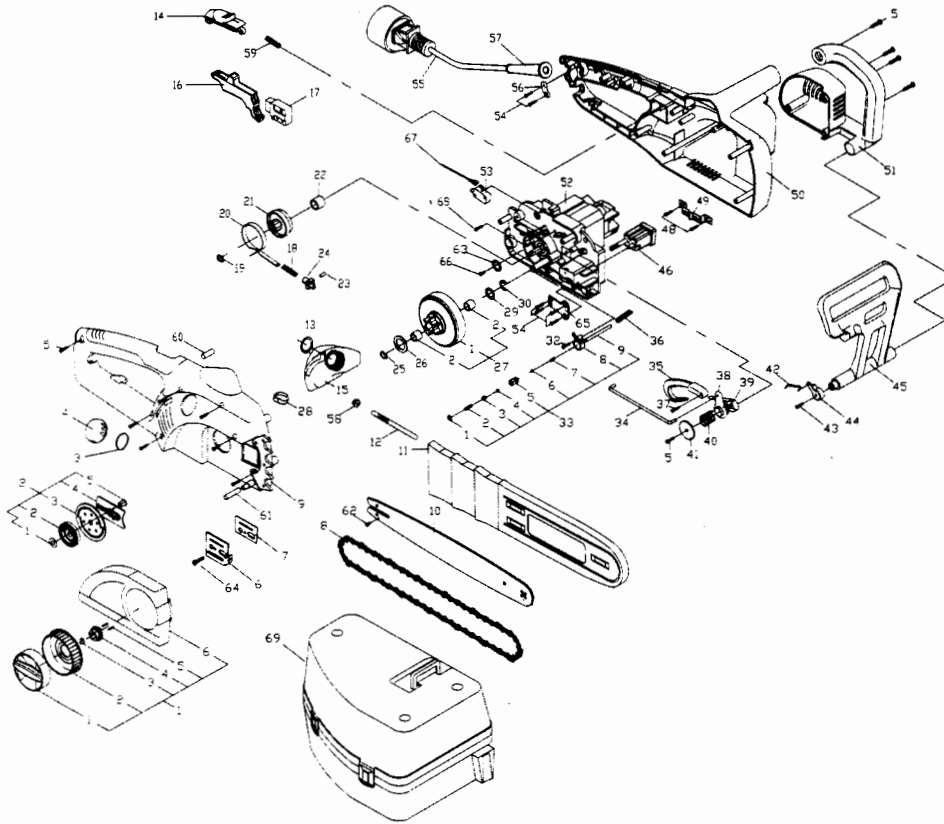

<u>Item</u>	<u>Parts No.</u>	<u>Description</u>	<u>Item</u>	<u>Parts No.</u>	<u>Description</u>	<u>Item</u>	<u>Parts No.</u>	<u>Description</u>
1	6228-211403	HOUSING (R)	26	6014-210502	WASHER	52	6228-211301	MOTOR GEAR BOX ASS'Y(TB3516)
2	6228-211504	CHAIN COVER ASS'Y	27	6228-210104	GEAR BEARING ASS'Y		6228-211401	MOTOR GEAR BOX ASS'Y(TB4516CC)
3	6012-210501	WASHER	28	6077-211501	COVER	53	6022-211501	SWITCH
4	6017-210103	OIL COVER	29	6057-210102	WASHER	54	6SDABB04-10	SCREW
5	6SDABB04-18	SCREW	30	6CC-10	C RING	55	6011-211502	POWERCORD
6	6043-211302	ADJUSTMENT PLATE	32	6SDABB03-18	SCREW	56	6043-840001	STRAIN RELIEF
7	6050-211301	OIL WASHER	33	6228-210105	OIL PUMP ASS'Y	57	6059-855001	CORDGUARD
8	6220-210201	CHAIN	34	6188-211501	PULL BAR	58	6012-211501	RUBBER STOP
9	6038-211505	HOUSING (R)	35	6114-211501	PULL PLATE	59	6024-211506	SPRING
10	9040-310175	BAR	36	6024-211507	SPRING	60	6PC05-14.7	PIN
11	6101-210506	COVER (TB4516CC)	37	6QABB04-25	SCREW	61	6PC4.4-35	PIN
12	6228-211506	OIL PIPE ASS'Y	38	6181-211501	CLUTH	62	6SQAB-04-06	SCREW
13	6076-210503	WASHER	39	6181-211502	CLUTH	63	6WFB-03-12	WASHER
14	6056-211502	SWITCH BUTTON	40	6024-211503	SPRING	64	6SDABB03-15	SCREW
15	6066-211501	OIL TENK	41	6014-211501	WASHER	65	6158-211502	PLATE
16	6028-211502	TRIGGER	42	6154-211301	CONNECTING BAR	66	6SLABB03-06	SCREW
17	6022-211502	SWITCH	43	6SDABB05-35	SCREW	67	6010-211301	WIRE
18	6024-211301	SPRING	44	6154-211504	CONNECTOR	68	6SDABB04-14	SCREW
19	6CY-08	RING	45	6017-211503	FRONT-HAND GUARD	69	6120-211401	CARRY CASE (TB4516CC)
20	6079-211501	SPRING, BRAKE	46	6228-211303	FIXED ACC'Y			
21	6073-211501	GEAR	48	6SDABB04-16	SCREW			
22	6059-210201	ADJUSTMENT COVER	49	6079-211503	SPRING			
23	6115-211502	PIN	50	6038-211506	HOUSING (L)			
24	6154-211502	CONNECTION	51	6086-211501	REAL COVER			
25	6CG-9.5	C RING						