

# PARTS LIST

## MODEL TB4218CC



Item	Parts No.	Description	Item	Parts No.	Description	Item	Parts No.	Description
1	9238-MD0701	ENG ASS'Y	1-30	9022-310501	SWITCH	1-60	9228-310504	MUFFLER ASS'Y
1-1	9157-310502	CAP. BEARING	1-31	9WFB-05-21	WASHER	1-61	9SXDB-06-70	SCREW
1-2	9DB-620101	BEARING	1-32	9SKKBY8/16-0.625	SCREW	1-62	9010-310502	CABLE THROTTLE
1-3	9228-310505	CRANK/ROD ASS'Y	1-33	9068-MD0701	HANDLE, FRONT	1-63	9129-310504	FUEL PIPE
1-4	9290-310502	PISTON	1-34	9228-MD0701	STARTER HOUSING ASS'Y	1-64	9221-310001	WOODRUFF KEY
1-5	9189-310502	RING, PISTON	1-35	9NAB-5/16-24	NUT	1-65	9183-310502	MESH
1-6	9NB-K101410	ROLLER, PISTON	1-36	9169-310501	FLYWHEEL	1-66	9252-310501	FILTER, AIR
1-7	9PC-10-34.5	PIN, PISTON	1-37	9SKKBY8/16-0.75	SCREW	1-67	9082-310508	BAFFLE
1-8	9CA-10.3	RING	1-38	9010-310503	WIRE ASS'Y	1-68	9SKKBY-8/16-1	SCREW
1-9	9072-310501F	CASE, CRANK	1-39	9288-310501-CH	IGNITION ASS'Y	1-69	9SKKBY8/16-1.4	SCREW
1-10	9295-310502	SPARK PLUG	1-40	9051-310501	CONDUCTIVE PLATE	1-70	9017-310509	SHROUD
1-11	9292-310501F	CYLINDER	1-41	9228-310207	OIL CAP ASS'Y	1-71	9017-310508	CAP, ANTI-DUST
1-12	9012-310502	RUBBER, ISOLATOR	1-42	9228-310514	SPRING ASS'Y	1-72	9SKKBY8/16-0.5	SCREW
1-13	9082-310505	SPACER	1-43	9142-310002	PRIMER	2	9228-310515	DRUM ASS'Y
1-14	9STDB-05-60	SCREW	1-44	9157-310501	FELT	3	9228-310528	CLUTCH ASS'Y
1-15	9082-310504	ISOLATOR, CARBURETOR	1-45	9024-310506	SPRING	4	9077-310501	CAP, ANTI-DUST
1-16	6WSB-06	SPRING WASHER	1-46	9SFABJ06-55	SCREW	5	9NHC-09	NUT
1-17	9SACB-06-25	SCREW	1-47	6SDABB04-08	SCREW	6	9228-MD0702	BRAKE KIT ASS'Y
1-18	9082-310506	SPACER	1-48	9228-310511	HOUSINGASS'Y	7	9NAZ-5/16-18	NUT
1-19	9287-310501	CARBURETOR	1-49	9012-310503	HOLDER, CABLE	8	9040-MD0703	BAR(TB4218CC)
1-20	9228-310510	AIR FILTER ASS'Y	1-50	9114-310510	LEVER, CHOKE	9	6220-210805	CHAIN(TB4218CC)
1-21	9NHZ-05	NUT	1-51	9012-310504	HOLDER, CHOKE LEVEL	10	9SGKBY10/14-0.625	SCREW
1-22	9SGKBY10/14-0.625	SCREW	1-52	9024-310507	SPRING	11	9228-310206	FUEL CAP ASS'Y
1-23	9068-310501	HANDLE, LEFT PART	1-53	9124-310102	CONNECTOR	12	9182-310001	FILTER
1-24	9028-310502	TRIGGER, THROTTLE	1-54	9013-310501	OIL PIPE	13	9042-310201	WRENCH
1-25	9028-310501	TRIGGER, RELEASE	1-55	9228-310526	PUMP ASS'Y	14	9017-310214	SCABBARD
1-26	9024-310504	SPRING	1-56	9073-310503	WORM	15	9120-MD0701	CARRY CASE
1-27	9SKKBY10/14-0.68	SCREW	1-57	9082-310507	SPACER			
1-28	9027-310101	RUBBER	1-58	9082-310502	BAFFLE			
1-29	9068-310502	HANDLE, REAR	1-59	9082-310501	BAFFLE			