


# PARTS LIST

## ENGINE PARTS - TB90BC 2-CYCLE GAS TRIMMER / BRUSHCUTTER

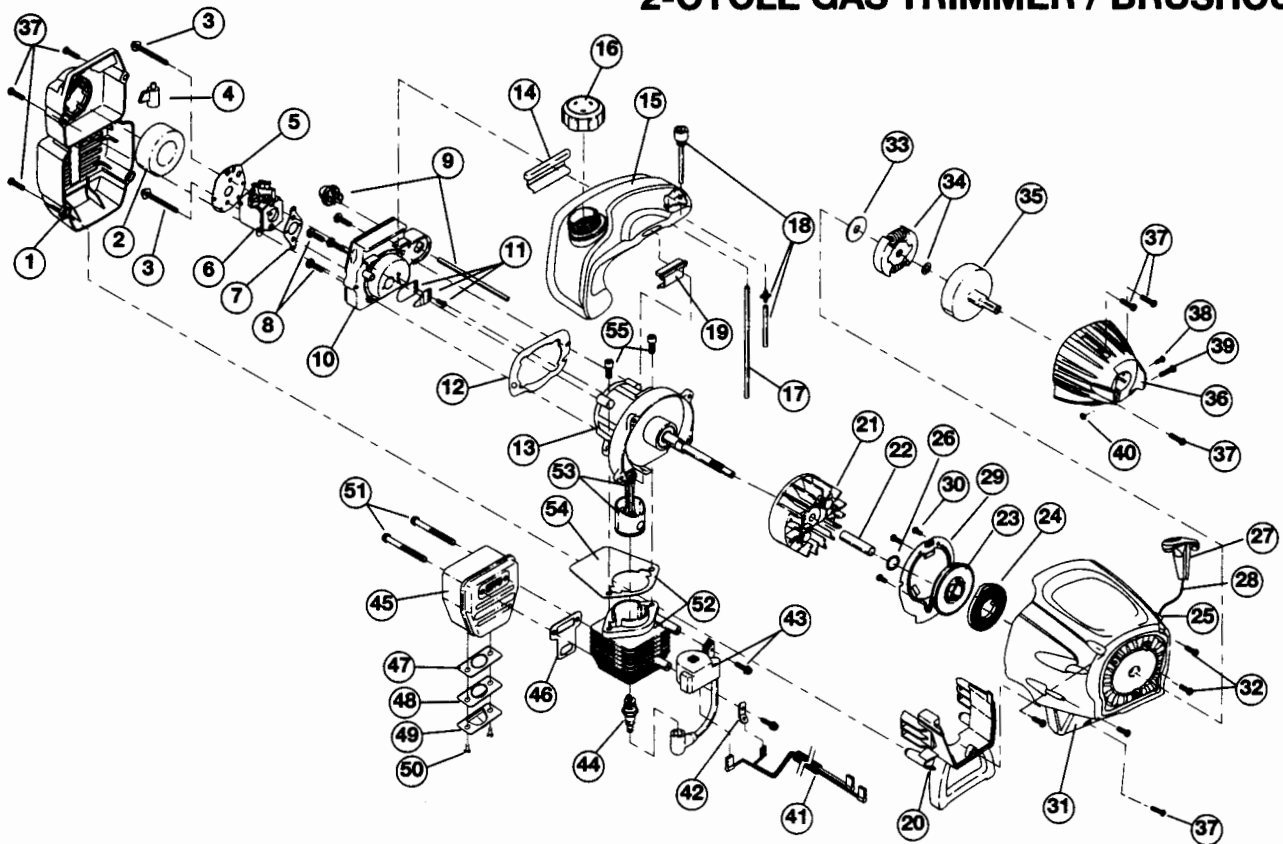


Item	Part No.	Description	Item	Part No.	Description
1	753-04810	Air Cleaner Cover Assembly (includes 2 & 37)	31	753-04402	Starter Housing Assembly (includes 23-30, 32 & 37)
2	791-180350B	Air Cleaner Filter	32	791-181862	Housing Screw
3	791-180351	Carburetor Mounting Screw Assembly	33	791-182396	Clutch Washer
4	753-0427	Choke Extension	34	791-182369	Clutch Rotor Assembly
5	753-1194	Choke Plate	35	791-153592	Clutch Drum Assembly
6	753-04338	Carburetor Assembly (includes 7 & 18)	36	753-1204	Clutch Cover Assembly (includes 37-40)
7	791-610675	Carburetor Gasket	37	791-181345	Cover Screw
8	791-181860	Carb Mount Screw	38	791-182519	Anti-Rotation Screw
9	791-683947B	Primer & Hose Assembly	39	753-04003	Clamping Screw
10	753-1196	Carb Mount Assembly (includes 8, 11 & 12)	40	791-180217	Clamping Nut
11	791-684451	Reed Assembly	41	753-04792	Wire Leads and Sleeve
12	753-1208	Carburetor Mount Gasket	42	791-611063	Ground Tab
13	753-04609	Crankcase Service Assembly (includes 8)	43	753-04337	Module Assembly (includes 42)
14	791-612134	Rear Mounting Pad	44	791-610311B	Spark Plug
15	753-04307	Fuel Tank Assembly (includes 16-18)	45	753-04618	Muffler Assembly (includes 46-51)
16	753-04084	Fuel Cap Assembly	46	753-04619	Exhaust Gasket
17	791-181168	Fuel Return Line	47	753-04689	Spark Arrestor Screen
18	753-04233	Fuel Line Assembly	48	753-04690	Exhaust Hood Diverter
19	791-145308	Front Mounting Pad	49	753-04691	Exhaust Hood
20	791-182064	Shroud Extension & Stand	50	753-04315	Screws
21	791-182736	Flywheel Assembly	51	753-04620	Muffler Mounting Bolts
22	791-181525	Spacer	52	753-04814	Cylinder Assembly (includes 54 & 55)
23	753-04459	Recoil Pulley Assembly (includes 24, 26 & 28)	53	753-04367	Piston and Rod Assembly
24	753-04286	Recoil Spring	54	753-04182	Cylinder Gasket
25	753-1200	Rope Guide	55	791-182723	Cylinder Bolt
26	791-181247	Pulley Retainer	*	753-1209	Piston Ring Set
27	791-181079	Pull Handle	*	753-04612	Short Block Assembly (includes 8, 13, & 52-55)
28	791-613103	Rope	*	791-181599	Clutch Springs (Qty. 2)
29	753-1201	Pressure Plate Assembly			
30	753-1202	Plate Screw			

\* Items Not Shown

# PARTS LIST

## BOOM AND TRIMMER PARTS - TB90BC 2 CYCLE TRIMMER / BRUSHCUTTER

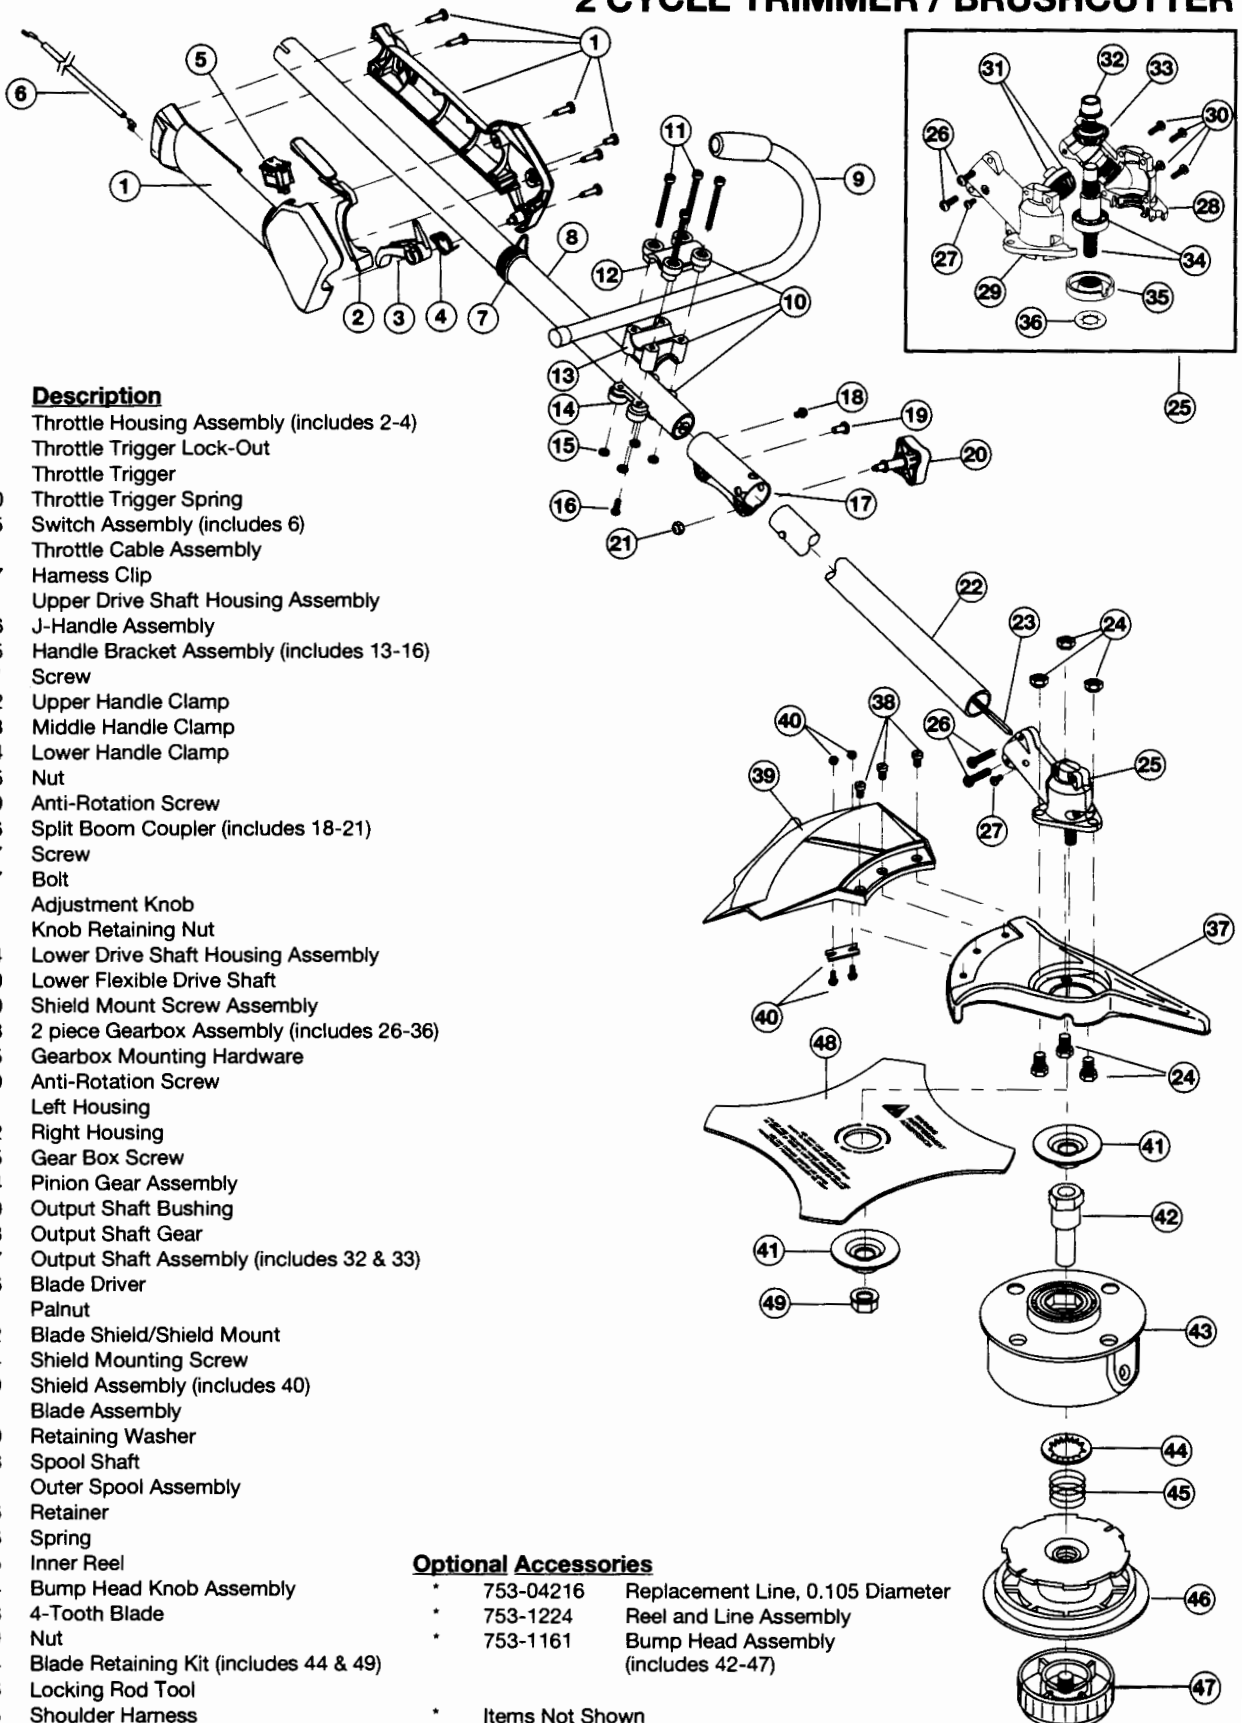

Item	Part No.	Description
1	791-00040	Throttle Housing Assembly (includes 2-4)
2	791-00041	Throttle Trigger Lock-Out
3	791-00042	Throttle Trigger
4	791-182690	Throttle Trigger Spring
5	791-182405	Switch Assembly (includes 6)
6	753-04136	Throttle Cable Assembly
7	791-610327	Harness Clip
8	753-04236	Upper Drive Shaft Housing Assembly
9	791-180286	J-Handle Assembly
10	791-683295	Handle Bracket Assembly (includes 13-16)
11	791-181811	Screw
12	791-181812	Upper Handle Clamp
13	791-181813	Middle Handle Clamp
14	791-181814	Lower Handle Clamp
15	791-181815	Nut
16	791-145569	Anti-Rotation Screw
17	791-181616	Split Boom Coupler (includes 18-21)
18	791-182057	Screw
19	791-181617	Bolt
20	791-181981	Adjustment Knob
21	753-04380	Knob Retaining Nut
22	791-180804	Lower Drive Shaft Housing Assembly
23	791-613300	Lower Flexible Drive Shaft
24	791-182200	Shield Mount Screw Assembly
25	791-182193	2 piece Gearbox Assembly (includes 26-36)
26	791-182195	Gearbox Mounting Hardware
27	791-145569	Anti-Rotation Screw
28	791-182191	Left Housing
29	791-182192	Right Housing
30	791-182195	Gear Box Screw
31	791-182194	Pinion Gear Assembly
32	791-182199	Output Shaft Bushing
33	791-182198	Output Shaft Gear
34	791-182197	Output Shaft Assembly (includes 32 & 33)
35	791-182196	Blade Driver
36		Palnut
37	791-147492	Blade Shield/Shield Mount
38	791-683304	Shield Mounting Screw
39	791-683299	Shield Assembly (includes 40)
40	791-682061	Blade Assembly
41	791-147490	Retaining Washer
42	791-612483	Spool Shaft
43	791-683301	Outer Spool Assembly
44	791-612026	Retainer
45	791-610636	Spring
46	791-147495	Inner Reel
47	791-180814	Bump Head Knob Assembly
48	791-145873	4-Tooth Blade
49	791-181699	Nut
*	791-180014	Blade Retaining Kit (includes 44 & 49)
*	791-613226	Locking Rod Tool
*	791-682075	Shoulder Harness

### Optional Accessories

- \* 753-04216 Replacement Line, 0.105 Diameter
- \* 753-1224 Reel and Line Assembly
- \* 753-1161 Bump Head Assembly (includes 42-47)

\* Items Not Shown